



Operating Instructions for 6-Burner Stove

- Dimensions 36"W x 33"D x 56"H
-
1. Connect regulator to propane tank (counter clockwise)
 2. Turn gas valve on & check for leaks
 3. To light burners - lift top of stove & light pilots
 4. To light oven – open kick plate at bottom front & light pilot
 5. Set oven temperature knob to desired setting
 6. Press red/black button down for 15 seconds to bleed line
 7. While holding button down press igniter button
-
- All equipment is tested before delivery but should be rechecked at least 6 hours prior to use in case of malfunction
 - Equipment must be kept dry and away from moisture
 - When using multiple pieces of electrical equipment, do not overload the circuit, this may cause the equipment to fail